

TROUBLE SHOOTING

MACHINE STOPS

1. Check to see if the overload button, if fitted, has popped out. If so, check the clipper over to see if the filter has blocked, the blades are dry or clogged, and correct any problem before pushing the overload button back in with a biro or pointed object, right. If it releases again, take the clippers to a specialist to check.
2. The fuse may have 'blown'. Check clipper over as above before replacing fuse, below.

MOTOR SLOWS DOWN

1. Insufficient oil. (Every time you hear the clipper begin to slow down, it's essential that you use more oil as a matter of course.)
2. Blades blunt and need re-grinding.

BLADES WON'T CUT

1. Hair between blades. Remove and clean.
2. Blades blunt—replace.
3. Tension too slack—re-tension.
4. Horse damp—try again later.

MACHINE GETTING HOT

1. Blades too tight—retension.
2. Poor hold—hand is covering vents.
3. Motor needs servicing/greasing.
4. Insufficient oil on blades.
5. Air vents choked with hairs and/or dirt.

