

# **WAHL**

## **TOUCH-UP TRIMMER**

### **Operating Instructions for The Touch-Up Rechargeable 9854 Pet Trimmer**

### **Instrucciones de operación de la Touch-Up Recargable 9854 Recortador para Mascota**

#### **1-YEAR LIMITED WARRANTY**

Valid in U.S.A. Only

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you **FREE OF CHARGE**. Our warranty does not cover blades, which are wear out parts. Please mail your product prepaid to Wahl Clipper Corporation, 3001 Locust Street, Sterling, Illinois 61081, Attention: Repair Department, with a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Enclose a check or money order in the amount of \$6.50 to cover handling. Products out of warranty will be repaired at our standard repair charges. This warranty is void and no repair or replacement will be made under this warranty or otherwise if: 1) The product is modified in any manner or repaired by anyone other than Wahl Clipper Corporation or Wahl authorized service center. 2) The product has been used commercially or subjected to unreasonable use. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use is limited to the one-year period provided in the express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you.

## **IMPORTANT SAFEGUARDS**

When using your electrical appliance, basic precautions should always be followed, including the following: **READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS TRIMMER.**

## **DANGER**

To reduce the risk of death or injury by electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. Always unplug this appliance before cleaning.
6. Unplug the charger before using trimmer.

## **WARNING**

**To reduce the risk of burns, electrical shock or injury to persons:**

1. This power unit is intended to be correctly orientated in a vertical or floor mount position.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
5. Keep the cord away from heated surfaces.
6. Insert only recharging transformer plug into charger receptacle.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Never drop or insert any object into any opening.
9. Do not use this appliance with a damaged or broken blade or trimming attachment, as injury may occur.
10. Always attach plug to appliance first, then to outlet.

## **SAVE THESE INSTRUCTIONS**

**For Household Use Only**

### **RECHARGING**

- 40 minute minimum continuous run time with a fully charged battery
- 15-17 hours to reach a full charge with a discharged battery

1. This trimmer is conveniently designed for household use. It should be allowed to charge overnight before first use.
2. Remove the trimmer, recharging transformer and accessories from the packing material.
3. Connect the transformer to the trimmer. **BE SURE TRIMMER IS IN THE "OFF - 0" POSITION WHEN CHARGING.**
4. Plug the recharging transformer into any convenient electrical outlet at the correct voltage.
5. When trimmer is low in power, it should be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to continuously charge the battery without overcharging.
6. Battery life may be extended with the following procedure: Once every month, let the trimmer run until the motor stops. Move the switch to the "OFF - 0" position and recharge fully overnight.

### TROUBLESHOOTING

If your Trimmer does not seem to take a charge, check the following before returning it for repair:

1. Check outlet to make sure it is working by plugging in another appliance.
2. Make sure the outlet simply is not connected to a light switch which turns the power at the outlet off when lights are turned off.
3. Be sure the trimmer is properly connected to the recharging transformer, all connections are secure and the switch on the trimmer is turned "OFF - 0."
4. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
5. If trimmer does not run and it is completely charged, turn the unit "ON - 1" and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

### CARING FOR YOUR TRIMMER

#### OILING BLADES

For best results, put one or two drops of Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated—do not attempt to oil.

When oiling your trimmer, turn the trimmer "ON," hold the unit with the blades facing DOWN and squeeze one or two drops of oil onto the blades. Turn the trimmer "OFF." Wipe off excess oil with soft cloth.

#### NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

#### BLADE CARE

Trimmer blades have hardened, precision-ground cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material.

#### CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage.

#### SPECIAL FEATURES:

Your trimmer has been designed with several advanced features to help you get perfect results every time you trim.

- Soft-Touch Grip allows you to hold the trimmer in a comfortable position for precision trimming.
- An ergonomic shape allows you to hold the trimmer in a comfortable position for precision trimming. It also provides optimum visibility.
- A Multi-Position Trimming Guide provides the greatest choice of cutting lengths for a consistent trim every time. The guide can be removed (providing another cutting position) and reattached without changing the preset cutting length, so once you have found the perfect length, there's no guesswork in achieving it every trim. The trimming guide is a multi-piece assembly, and it should not be disassembled. To attach the guide, simply slide it over the blade at a slight angle and press down to secure in position. To remove the guide, gently push up on the release tab or press the head release button and slide the assembly away from the trimmer. Adjust the trimming length by pressing on the thumb lever and sliding to the desired setting.
- A Detachable blade system enables you to quickly change from a standard-width blade for regular trimming to a narrow-width blade for detail trimming anywhere to define the hair line and clip any strays.
- 5,000 RPM blade speed

To remove attachment, simply pull top edge of blade away from body unit. To attach, align back tab of attachment head to cavity on the inner edge of trimmer unit. Should blades become damaged or dull or if you want additional attachment heads for your trimmer, you may purchase them from Wahl.



#### PET TRIMMING

**Paws:** To trim hair from the pads of your dog's foot. Stand in the opposite direction as the dog, raise and hold firmly dogs paw so you can see the bottom of the foot. Use trimmer to remove hair between pads.

**Ears:** To clean hair from underside of ears. Gently hold ear in hand and remove hair from underside of ear. Always trim away from the face.

**Face:** Trimmer can also be used to clean up long eye hair. Use special caution near face of dog to prevent injury. Hold skin tight to prevent injury.



#### SERVICE AND REPAIR

If you have problems with your trimmer, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation

Attn: Repair Department

3001 Locust Street

Sterling, IL 61081

Telephone (815) 625-6525

For products purchased outside the United States, contact your distributor.

30 Day Money Back Guarantee!

If for any reason within 30 days of purchase of your Wahl® trimmer you are not satisfied with your trimmer and would like a refund, just return your trimmer, together with the sales receipt, to the retailer from whom you purchased it. Wahl will reimburse all retailers who accept trimmers within 30 days of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-334-4627 in the United States.

#### Ni-MH ONLY BATTERY REMOVAL AND DISPOSAL

- 1200 mAh Nickel Metal Hydride

Under normal use, the rechargeable Ni-MH battery in your trimmer will last from three to five years. At the end of its life, when it will no longer take a full charge, the Ni-MH battery must be removed and recycled or disposed of properly. Do not attempt to replace the battery. All servicing or battery replacement should be performed by an Authorized WAHL Service Location.